

**S M A R T
S P O T -
- U S E R
G U I D E**

»» QUICK START GUIDE




HOP Ubiquitous S.L.

www.hopu.eu

Luis Buñuel 6
30562
Ceutí, Murcia
Spain

Index

What is a Smart Spot? _____	2
Smart Spot Features _____	3
First steps with your Smart Spot _____	4
How to install the device on a pole or on a wall _____	9
What is Homard Dashboard? _____	10
Connecting and managing the device _____	11
How to verify that the sensor is properly working? _____	16
How to see the sensor information? _____	17
Relevant Links _____	18

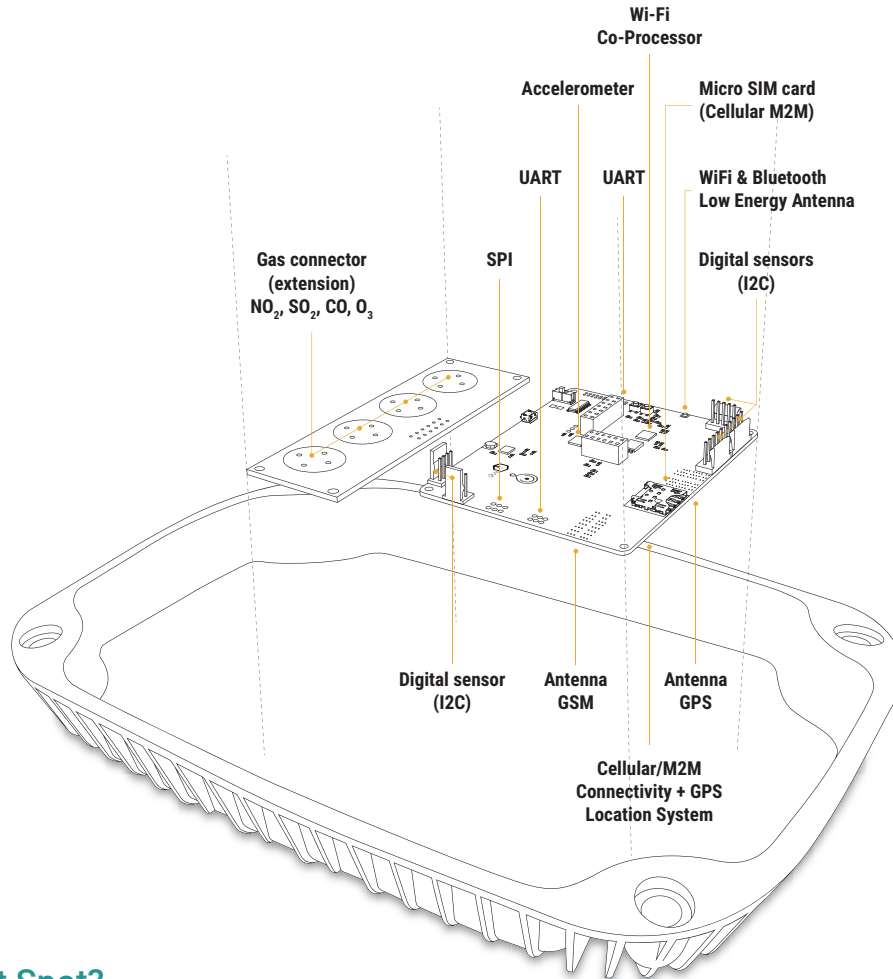

What is a Smart Spot?

Smart Spot is a connected device that has the ability to create an area of interaction with citizens and visitors. These devices send a URL (Web page link to open it in any browser such as smart phone Internet browser) to allow users to connect to online content and discover websites from physical locations. In addition, Smart Spot can optionally captures data regarding energy consumption, noise level and crowd-monitoring (people counting based on WiFi detection); thereby, Smart Spot allows to monitor, define metrics and estimate the confort level in a city area.


Smart Spot contextualizes the information of each Point of Interest sending notifications by proximity to mobile phones through Bluetooth Low Energy in a range of 1 to 80 meters, without requiring to install any native App over Android OS or iOS, since it is directly supported by the Operating Systems via Physical Web and iBeacon technologies.

Smart Spot Features

Hardware Component	Features
Smart Spot main board V1.4	<ul style="list-style-type: none"> • Gas Board connector. • 5x HOP Expansion Board connector. • 1x SPI and 1x UART connectors. • RGB LED. • Reset Factory Button. • BME280 (temperature/humidity/pressure). • MPU6050 (Accelerometer/Gyroscope).
Antennas	<ul style="list-style-type: none"> • External WiFi 802.11 b/g/n/e/i (STA-AP) / Bluetooth Low Energy Antenna. • External GSM/GPRS Antenna (Cellular). • Internal GPS Antenna to provide precise location of the device.
GSM (SIMCom 868)	<ul style="list-style-type: none"> • Quad-band 850/900/1800/1900MHz. • GPRS multi-slot class 12/10. • GPRS mobile station class B. • Compliant to GSM phase 2/2+. ◊ Class 4 (2 W @ 850/900MHz). ◊ Class 1 (1 W @ 1800/1900MHz). • GPRS class 12: max. 85.6 kbps (downlink/uplink). • Coding schemes CS 1, 2, 3, 4. • Micro-SIM card slot (15mm x 12mm – 3FF).
Gas Sensors Extension	<ul style="list-style-type: none"> • Integration of the Advanced Air Quality Monitoring board to allow observe gas concentrations (NO₂, SO₂, O₃, CO, H₂S) based on Alphasense sensors. • Measurements from 0 to 10 particles per million (ppm), covering from PM1, PM2.5 and PM10 particles flows. • Sensors sensibility is greater than most of the manufacturers. • Response time of the sensors is about 60 seconds, depending on the sensor. • Temperature range -20 °C to 50 °C. • A fourth electrode is included to improve temperature correction. The electrode output current does not change with the gas concentration. Thereby, offering a fine tune field calibration.
Noise pollution monitoring	<ul style="list-style-type: none"> • Developed under the conditions of the international standard IEC-61672. • Dynamic Range from 40 to 130 dB. • Quality Category: A-frequency weighting. • 0.1 dB Resolution.
Temperature/humidity probe	<ul style="list-style-type: none"> • Measure ambient temperature and humidity.


First steps with your Smart Spot (Set up connectivity)

Step 1

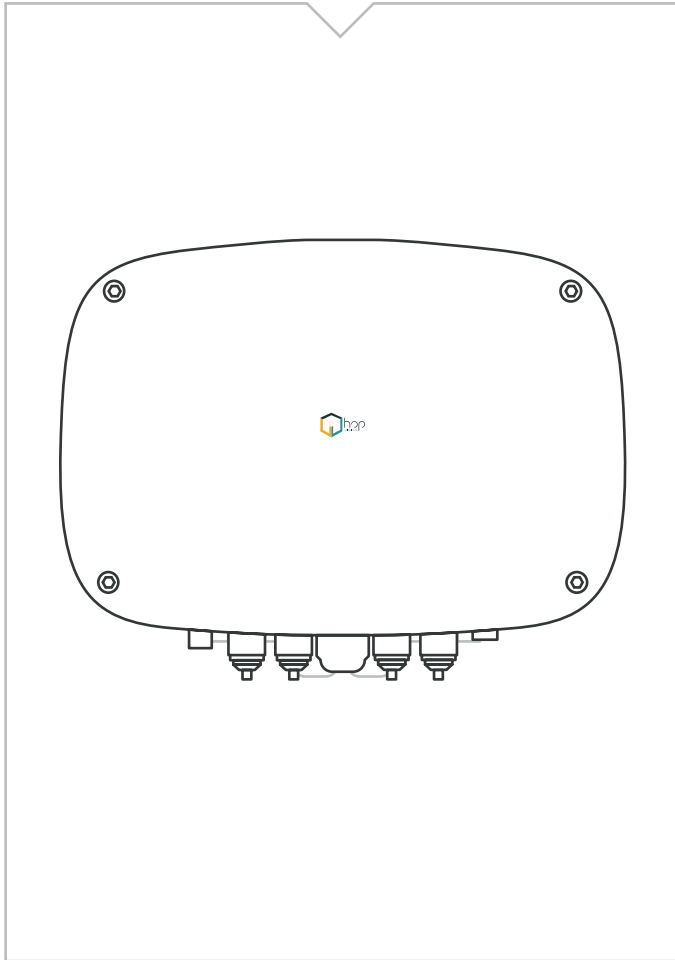


This is a Smart Spot.

Step 2

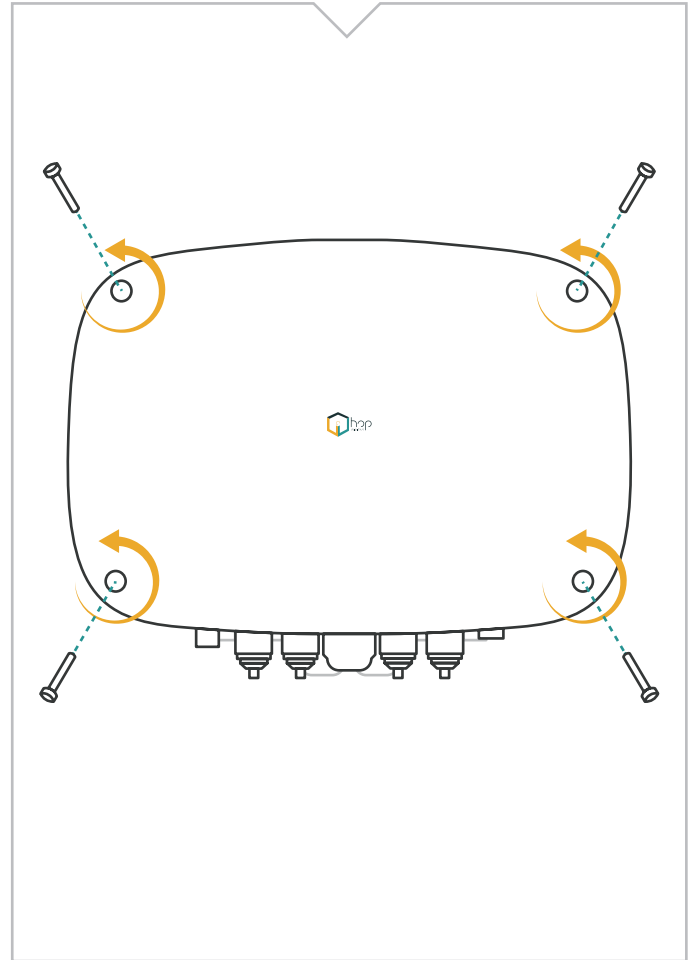


On top of the Smart Spot there are four screws. Unscrew the cover and open the Smart Spot.

Step 3

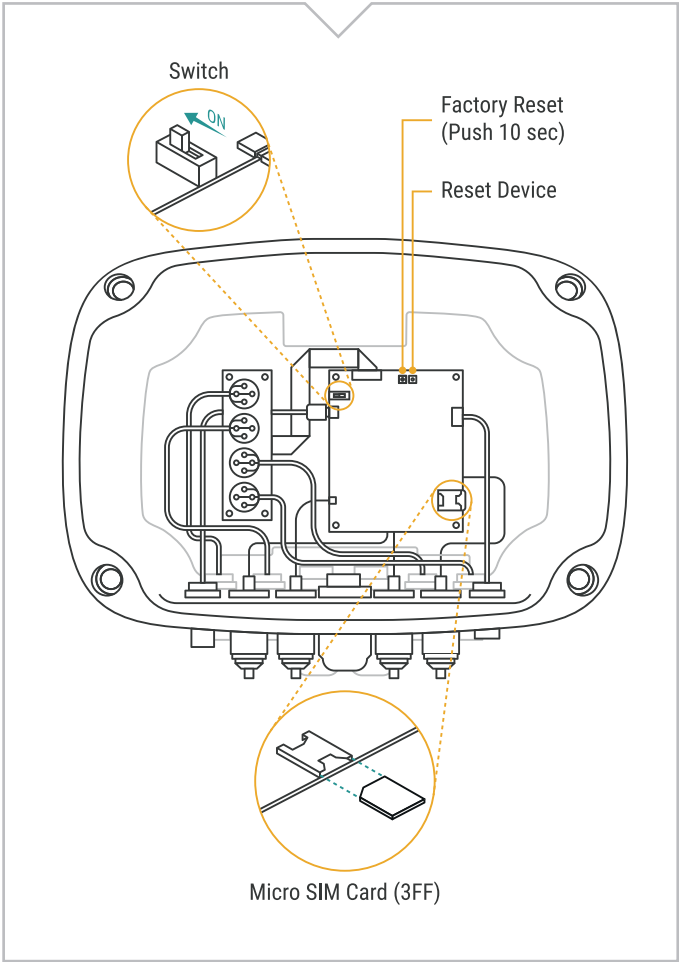


When the Smart Spot is open, make sure the switch is on and insert the Micro SIM Card in its place.

Step 4

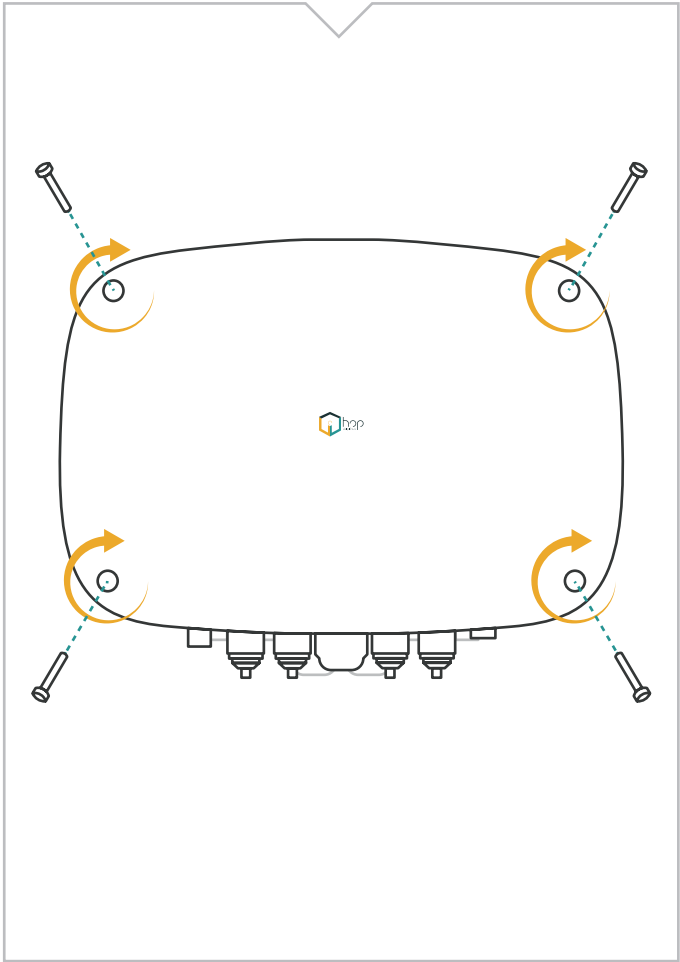


Put the cover back and place the screws in its place.

Step 5

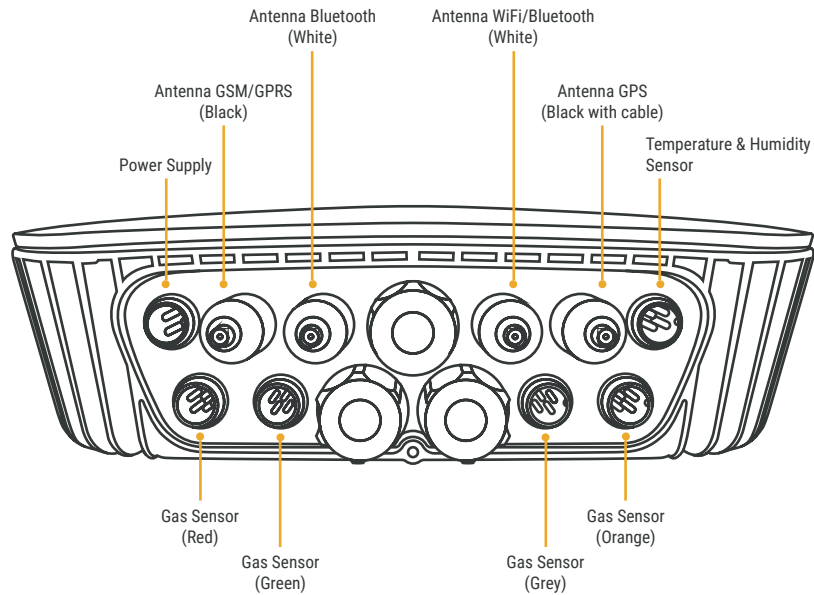


When everything is ready inside the Smart Spot can start putting the probes and antennas on the back of the device following the scheme of this figure.

Step 6

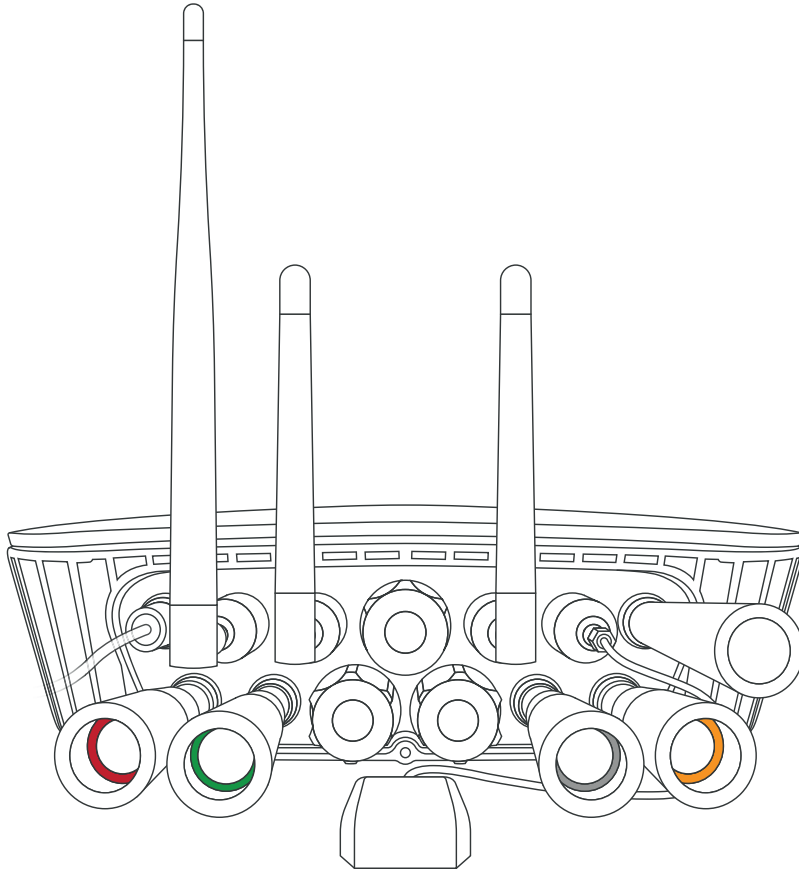

Once all the probes and antennas are placed, the appearance of the Smart Spot would look like the diagram.

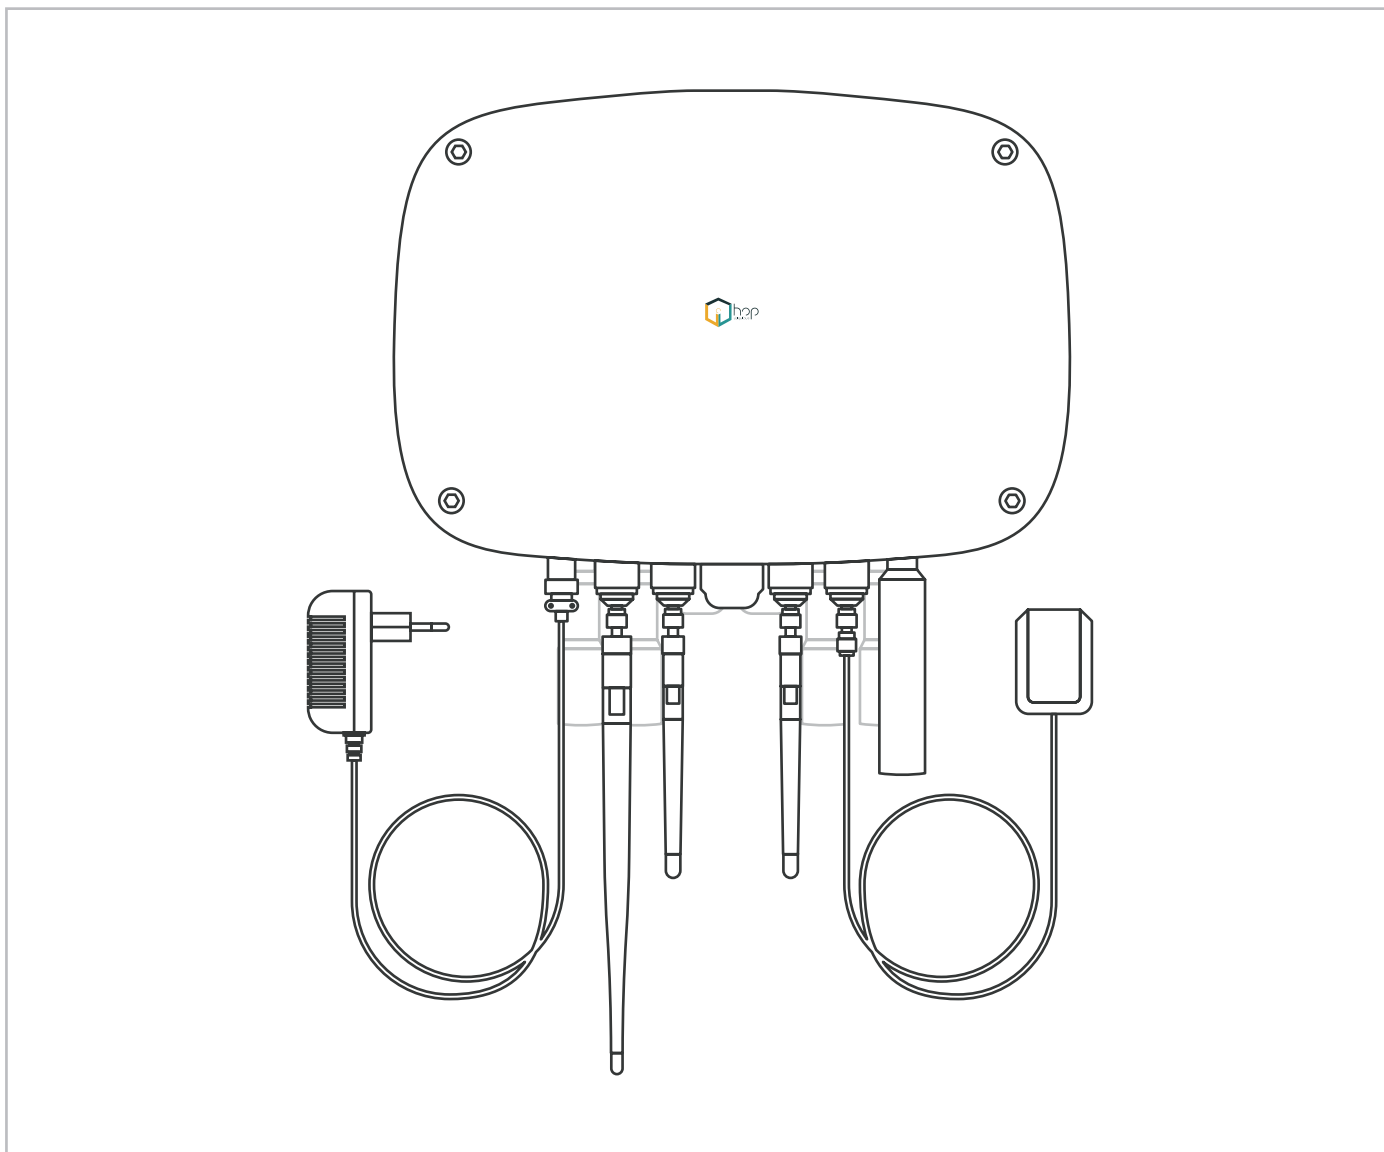


Finally, this is the aspect of a Smart Spot with all peripherals properly placed.

How to install the device on a pole or on a wall


Step 1

Put the clamps around the pole to hold the support. Screw the clamps until the support is fixed. On wall, hold the support on the wall directly.

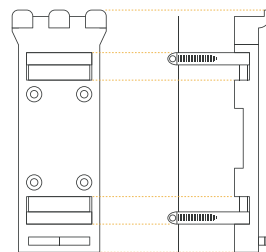


Step 2

Put the device on the support fitting the three pins in the three slots that the Smart Spot has in the back. Then drop it and fit it into the lower pin.

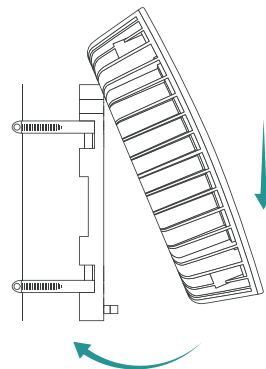

Step 3

Once fitted on all the pins, insert the screw through the bottom and press it until the Smart Spot is fixed.

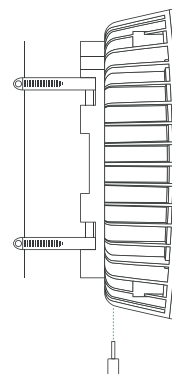

What is Homard Dashboard?

HOMARD is a device management platform for the OMA LwM2M protocol. HOMARD is our own platform.

The platform offers functionalities for device management, i.e., remote maintenance, firmware upgrade and open/standard APIs for information reporting.



Software Management

Enabling the installation, removal of applications, and retrieval of inventory software components already installed on the device and the most relevant firmware upgrades over the air.



Diagnostics and Monitoring

Enabling remote diagnostics and data models to check devices status, memory status, battery status, radio performance, Quality of Services (QoS) parameters, peripherals status, sensors status, and other relevant parameters for remote monitoring.



Connectivity and Security

Bluetooth, cellular connectivity, proxies, list of authorized servers for remote firmware upgrade and also all the relevant parameters for enabling secure communication.



Device capabilities

Allowing to the Management Authority to remotely enable and disable device peripherals like cameras, Bluetooth, USB, sensors (ultrasound, temperature, humidity, etc.) and other relevant peripherals from the nodes.




Lock and Wipe

Allowing to remotely lock and/or wipe the device, for instance when the device is lost (relevant for devices in open air, outdoor, etc.), or when the devices are stolen or sold. It enables the remote erase of personal/enterprise data when they are compromised.



Policy Management (Smart Contracts)

Allowing the deployment on the device of policies which the client (node, device, sensor) can execute and enforce independently under some specific conditions, i.e., if some events happen, then perform some operations.

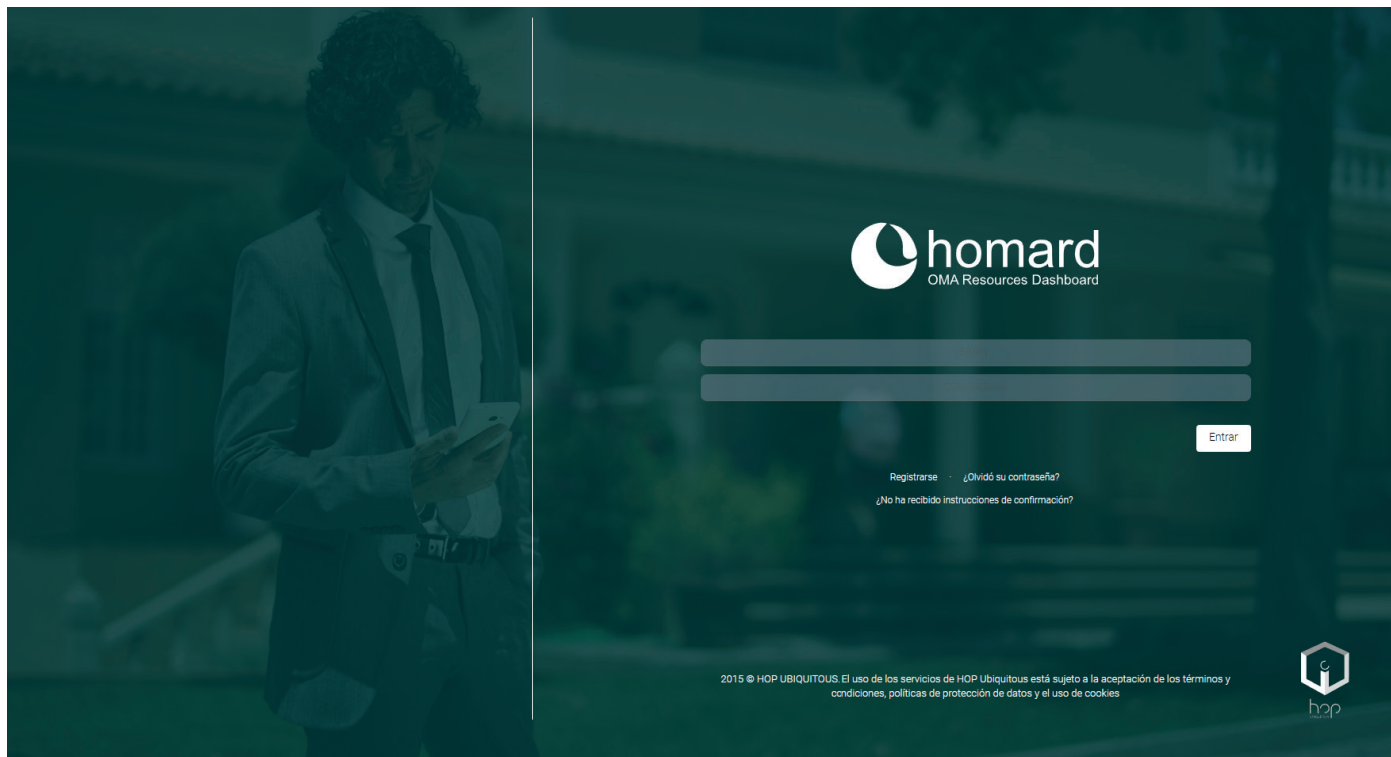

Homard Login Screen

Connecting and managing the device (default configuration)

The Smart Spots have a pre-configured WiFi Station where devices will connect, this Access Point (AP) can be easily deployed from GSM/GPRS Routers, MiFi Routers, WiFi Access Points, etc.

The default configuration is:
 SSID name: **defaultSSAP**
 Password: **defaultSSAP1234**

It means that Smart Spot will search and try to connect by default to a WiFi network with the mentioned SSID and password.

You need to create an access point in your smartphone or router with the default SSID name and Password for

the device to connect to the network. When this access point is created the device connect automatically and it is visible in Homard Dashboard.


From **http://staging.hopu.eu** enter with your User and Password that we give you and can see the Homard Dashboard options.

There are two ways to connect the Smart Spot to network other than default network:


- WiFi Connectivity.
- APN Connectivity (SIM Card).




Homard Home Screen

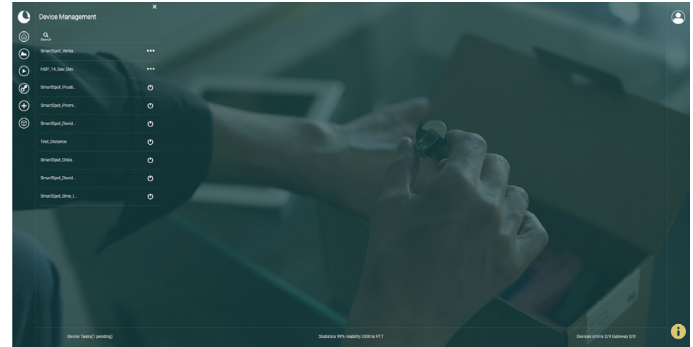

Homard Device Management Screen

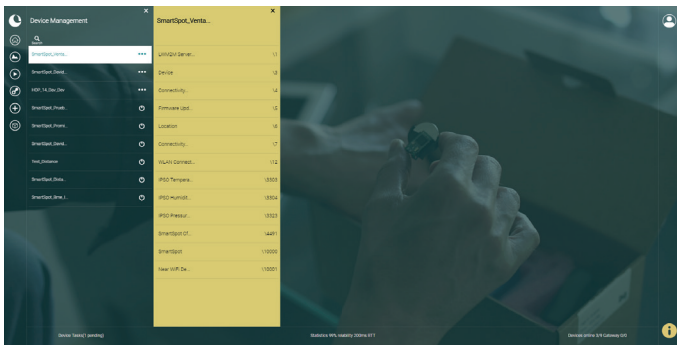

Homard Device Management with list of objects Screen

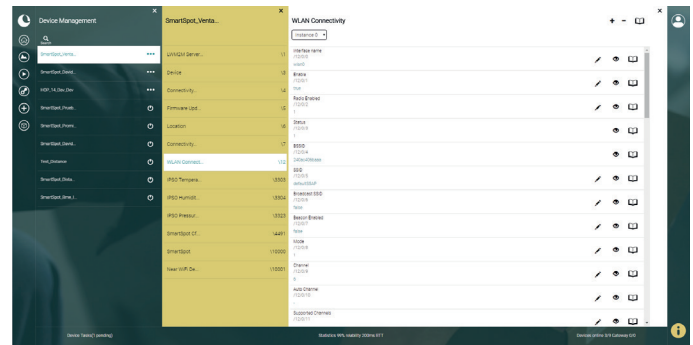

Homard Device Management WLAN Connectivity Object Screen

WiFi Connectivity

To connect to a network other than default network:

1. Firstly create a access point with de default configuration of device.
2. Go to **Device Management** and can see a li of devices connect to the network.
3. Locate the device to be configured and click it.
4. In the next column appears a list of object of this device, search the **WLAN Connectivity** object.
5. Create a new Instance and enter data:

- **Instance ID:** Number not equal to zero.
- **Interface name:** Human-readable identifier.
- **Enable (True or False):** True to connect with this configuration.

- **SSID:** SSID name of network to connect the device.
- **Mode:** Normally must be 1 (client), but there are others options.
- **Channels:** Choose a number of channel.
- **Standard:** Network type. Normally is the option 2.
- **Authentication Mode:** Resource can be anyone, it will be automatically configured by the stack.
- **Encryption Mode:** Defines which key is expected and used:

- **WPA2/WPA:** Will require fill the "WPA Pre Shared Key" field.
- **WEP:** Will require fill the "WEP Key Index" and "WEP Key Index" must be 1.

The screenshot displays the Homard Device Management interface. On the left, a sidebar lists various device objects. The main panel shows a tree view for 'SmartSpot_Venta...' with 'Device' selected. The right panel displays the details for 'Instance 0', including manufacturer, model number, serial number, firmware version, and various system metrics. The 'Reboot' option is highlighted with a play icon.

Object Path	Object Name	Value
LWM2M Server...		\11
Device		\13
Connectivity...		\14
Firmware Upd...		\15
Location		\16
Connectivity...		\17
WLAN Connect...		\112
IPSO Tempera...		\3303
IPSO Humidit...		\3304
IPSO Pressur...		\3323
SmartSpot Cf...		\4491
SmartSpot		\10000
Near WiFi De ...		\10001


Property	Value	Actions
Manufacturer	/3/0/0 HOP Ubiquitous S.L.	Eye, Book
Model Number	/3/0/1 SmartSpot.A31GK-A	Eye, Book
Serial Number	/3/0/2 A31GK-A	Eye, Book
Firmware Version	/3/0/3 0.6.5a - b0de2b0a4eba08288c00e703a60243ff448a9d	Eye, Book
Reboot	/3/0/4 -	Play
Factory Reset	/3/0/5 -	Play
Available Power Sources	/3/0/6 5	Eye, Book
Power Source Voltage	/3/0/7 5000	Eye, Book
Power Source Current	/3/0/8 3000	Eye, Book
Battery Level	/3/0/9 100	Eye, Book
Memory Free	/3/0/10 11	Eye, Book
Error Code	/3/0/11	Eye, Book

Device Tests(1 pending) Statistics 99% reliability 200ms RTT Devices online 3/9 Gateway 0/0

Homard Device Management Device Object Screen

6. In the list of objects, search **Device** object and click it.
7. Search the **Reboot** option and click on play icon.


Finally, the device reboot and connect to the configured network. Note that multiple access points configurations can be stored and Smart Spot will try to connect to all of them, until that it gets Internet connectivity.

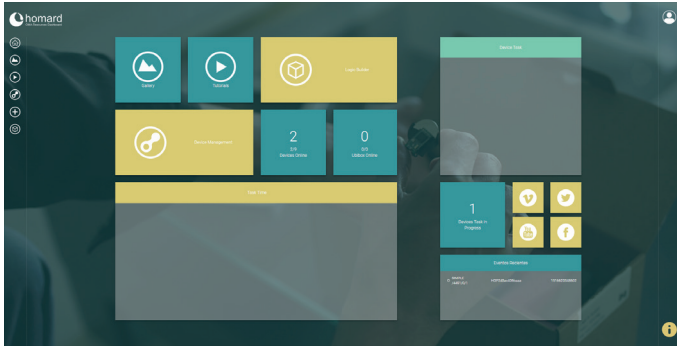


Homard Home Screen



Homard Device Management Screen

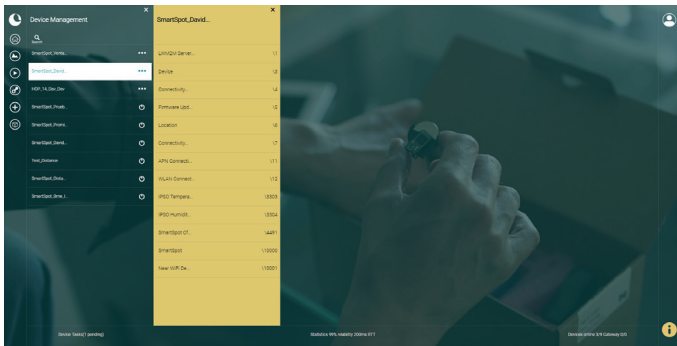

Homard Device Management with list of object Screen

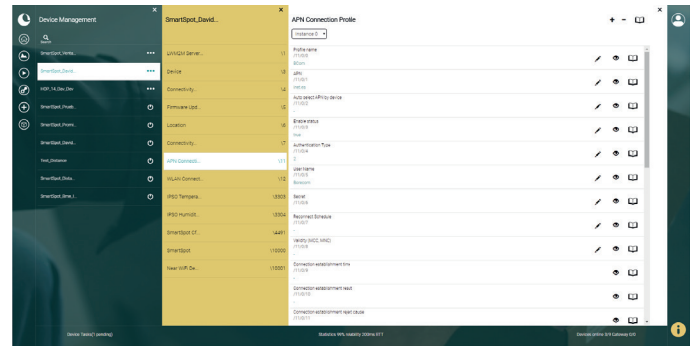

Homard Device Management APN Connection Object Screen

APN Connectivity (Cellular / M2M)

To connect the device a APN network other than the default network:

1. Firstly create a access point with de default configuration of device.
2. Go to **Device Management** and can see a li of devices connect to the network.
3. Locate the device to be configured and click it.
4. In the next column appear a list of object of this device, search the **APN Connection** object.
5. Create a new Instance and enter data:
 - **Profile name:** This name cannot be longer than 16 characters, identifies the profile name on the device.

- **APN:** This resource contains the APN which will be used to achieve cellular connectivity. This value is provided by the SIM card telco provider.
- **Enable Status:** This resource allows to enable or disable the configuration. Usually will be true. The OMA Object only allow to add one instance corresponding to the SIM card inserted on the device. Modify or delete/add the instance to change the configuration.
- **Authentication Type:** This resource has a value ≥ 0 and ≤ 3 . The value introduced by default should be 0, the authentication type will be automatically selected based on the connectivity provider.

The screenshot displays the Homard Device Management interface. On the left, a sidebar titled 'Device Management' contains a search bar and a list of devices. The main area is split into two panes. The left pane shows a list of objects for 'SmartSpot_Venta...' with columns for object name and ID. The right pane shows a detailed view of the 'Device' object for 'Instance 0', listing various system parameters and their values.

Object Name	ID
LWM2M Server...	\11
Device	\13
Connectivity...	\14
Firmware Upd...	\15
Location	\16
Connectivity...	\17
WLAN Connect...	\112
IPSO Tempera...	\3303
IPSO Humidit...	\3304
IPSO Pressur...	\3323
SmartSpot Cf...	\4491
SmartSpot	\10000
Near WiFi De...	\10001

Parameter	Value
Manufacturer	/3/0/0 HOP Ubiquitous S.L.
Model Number	/3/0/1 SmartSpot A31G1K-A
Serial Number	/3/0/2 A31G1K-A
Firmware Version	/3/0/3 0.6.5a - bbd6e2b0a4eba08288fc00e703a60243ff448a9d
Reboot	/3/0/4 -
Factory Reset	/3/0/5 -
Available Power Sources	/3/0/6 5
Power Source Voltage	/3/0/7 5000
Power Source Current	/3/0/8 3000
Battery Level	/3/0/9 100
Memory Free	/3/0/10 11
Error Code	/3/0/11 -


Statistics 99% reliability 200ms RTT
Devices online 3/9 Gateway 0/0

Homard Device Management Device Object Screen

- **User name:** Resource is used to specify the user name used to access the APN. Unless specified by the telco provider, this resource could be empty.
- **Secret:** Resource is used to specify the user name used to access the APN. Unless specified by the telco provider, this resource could be empty.
- **SIM card PIN:** Resource is used to introduce the PIN used to unblock the SIM card.

6. In the list of objects, search **Device** object and click it.
7. Search the **Reboot** option and click on play icon.

Finally, the device will reboot and connect to the configured APN.

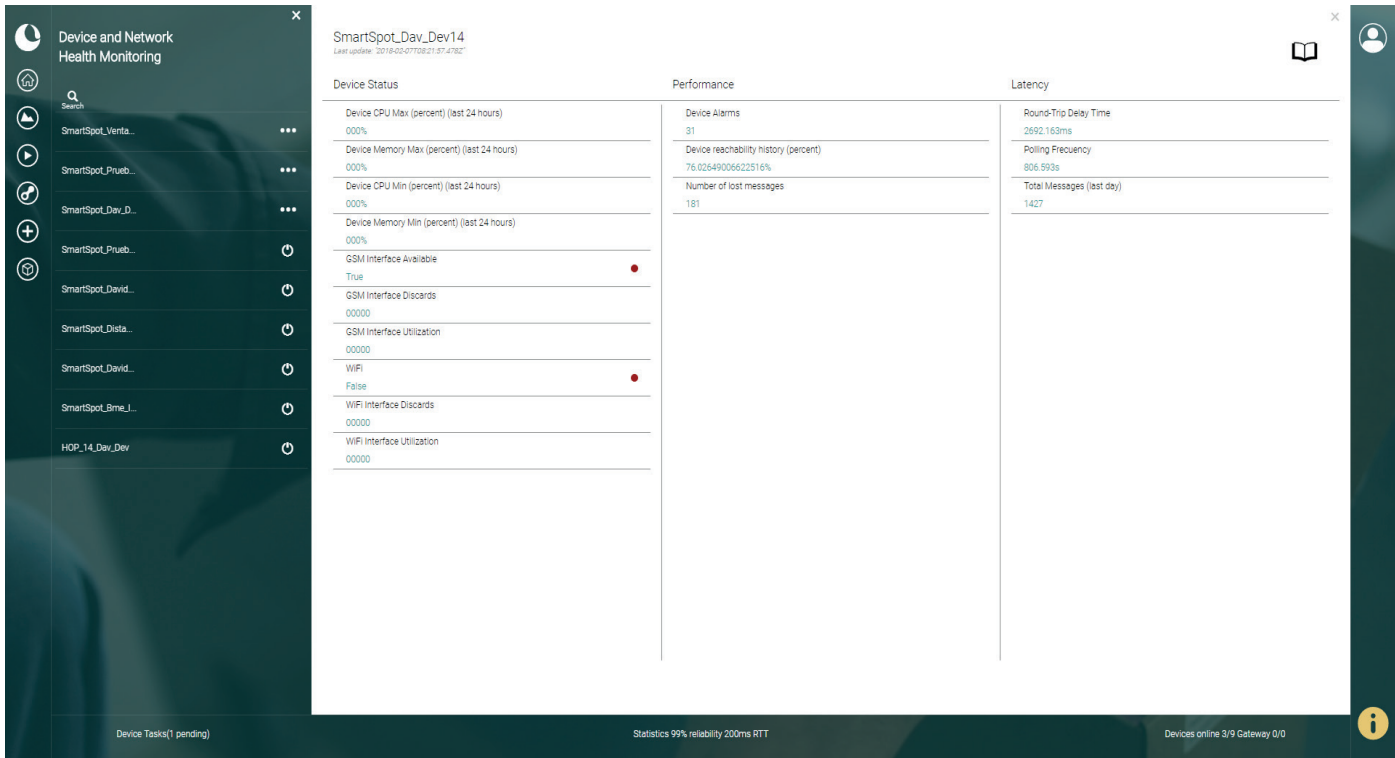

Homard Health Monitoring Screen


How to verify that the sensor is properly working?

To ensure that device and sensors are working, you can enter to **Health Monitoring** section of Homard. Here you will find information about **Device Status, Performance and Latency**.

In Device Status you can observe data about the Smart Spot CPU and Memory consumption and the configuration of the device.

The Performance section shows information about the Smart Spot reachability, lost messages and other alarms.

Finally, Latency section shows information about the time it takes to perform a test and communicate with the server.

To update the information you need to click on the Book icon  at the top right of the page. The information will be visible at that time.

The screenshot shows the 'Device Management' section of the Homard interface. On the left, a sidebar lists various devices and their states. The central pane displays a list of objects under the 'SmartSpot_Venta...' category, including 'LWM2M Server...', 'Device', 'Connectivity...', 'Firmware Upd...', 'Location', 'Connectivity...', 'WLAN Connect...', 'IPSO Tempera...', 'IPSO Humidit...', 'IPSO Pressur...', 'SmartSpot Cf...', 'SmartSpot', and 'Near WiFi De...'. The 'IPSO Tempera...' object is selected, and its details are shown in the right-hand pane.

The 'IPSO Temperature' details pane includes a dropdown for 'Instance 0' and several rows of sensor data:

Resource Name	Value	Actions
Min Measured Value /3303/0/5601	4.67336893081665	Eye, Book
Max Measured Value /3303/0/5602	17.099032836914062	Eye, Book
Min Range Value /3303/0/5603	-40	Eye, Book
Max Range Value /3303/0/5604	125	Eye, Book
Reset Min and Max Measured Values /3303/0/5605	-	Play
Sensor Value /3303/0/5700	12.953144073486328	Eye, Book
Units /3303/0/5701	Degree Celsius	Eye, Book

At the bottom of the interface, there are status indicators: 'Device Tests(1 pending)', 'Statistics 99% reliability 200ms RTT', and 'Devices online 3/9 Gateway 0/0'. A user profile icon is visible in the top right corner.

Homard Device Management Temperature Object Screen


How to see the sensor information?


To see the information for each of sensor, you need to ingress to **Device Management** section of Homard and, in the list of objects, look for the sensor that you want information. In this figure you can see the **Temperature Object** and all its resources.

Here, you can see the information for each resource of Temperature Sensor.

To update the information of all resources you need to click on the Book icon at the top right of the page. If you want update the information of a single resource, you need to click on the Book icon at right of the resource name.

Here, you can also do more actions with the resources.

You can create a simple observer or composite observer in a resource clicking the Eye icon  at the right of the resource name. This will send notifications every time that these resource changes.

Finally, you can active actions such as start/stop or reset. To active this actions you need to click on the Play icon  at the right of the resource name.

Relevant Links

- Homard Wiki: <https://homard.hopu.eu/indexPage/wiki.html>
- Homard App: <http://staging.hopu.eu>
- Smartcities Dashboard: <https://live.hopu.eu:8103/#/dashboard>
- Smartcities Web: <http://smartcities.hopu.eu>
- Hop Ubiquitous Web: <http://www.hopu.eu>

More information in [Development Guide](#)

hopu.eu

